

COOKWARMER MANUAL

Congratulations on your purchase of the Cookwarmer! This innovative appliance offers versatile functionality, allowing you to cook, roast, and even heat your room efficiently. To ensure optimal performance and safety, please read this user manual thoroughly before operating the cooker.

Safety Precautions:

1. **Read the Manual:** Familiarize yourself with the instructions and guidelines provided in this manual before using the cooker.
2. **Placement:** Place the cooker on a stable and heat-resistant surface. Ensure proper ventilation around the appliance during operation.
3. **Keep Away from Water:** Avoid placing the cooker near water sources to prevent electrical hazards.
4. **Child Safety:** Keep the cooker out of reach of children to prevent accidents.
5. **Unplug When Not in Use:** Always unplug the cooker from the power outlet when not in use or before cleaning.
6. **Avoid Overheating:** Do not operate the cooker continuously for extended periods to prevent overheating.
7. **Cleaning:** Allow the cooker to cool down before cleaning. Use a damp cloth to wipe the exterior surface. Do not immerse the appliance in water.

Features:

1. **intelligent Heating Technology:** The cooker utilizes advanced intel heating technology to cook food evenly and efficiently while conserving energy.
2. **Adjustable Temperature Control:** Easily adjust the temperature settings to suit different cooking requirements, from low heat for warming to high heat for searing and roasting.
3. **Timer Function:** Set the timer to automatically turn off the cooker after a specified duration, providing convenience and peace of mind.

4. **Multi-functional:** Besides cooking and roasting, the cooker can also be used for heating small rooms, and to warm oneself making it a versatile appliance for various purposes.

Operating Instructions:

1. **Power On/Off:** Plug the cooker into a power outlet and switch on the power button. To turn off the cooker, press the power button again and unplug from the power outlet.
2. **Temperature Control:** Use the temperature control knob to adjust the heat level according to your cooking requirements. Refer to the cooking guidelines for recommended temperature settings.
3. **Timer Setting:** Set the timer using the timer control knob to automatically switch off the cooker after the desired cooking duration. Rotate the knob clockwise to increase the timer duration and counterclockwise to decrease it.
4. **Cooking/Roasting:** Place the food on the cooking surface or in a suitable cookware and adjust the temperature and timer settings as needed. Monitor the cooking process to prevent overcooking.
5. **Room Heating:** To use the cooker for room heating, place it in a well-ventilated area and adjust the temperature to the desired level. Avoid placing flammable objects near the appliance during operation.

Maintenance:

1. **Cleaning:** Regularly clean the cooking surface and exterior of the cooker to remove food residues and grease buildup. Ensure the appliance is unplugged and cooled down before cleaning.
2. **Storage:** Store the cooker in a dry and dust-free environment when not in use. Avoid storing it near water sources or in humid conditions.
3. **Servicing:** Do not attempt to repair or disassemble the cooker yourself. If the appliance requires servicing or repairs, contact a qualified technician or the manufacturer for assistance.

By following these instructions and safety precautions, you can enjoy safe and efficient cooking, roasting, and room heating with your Cookwarmer.